


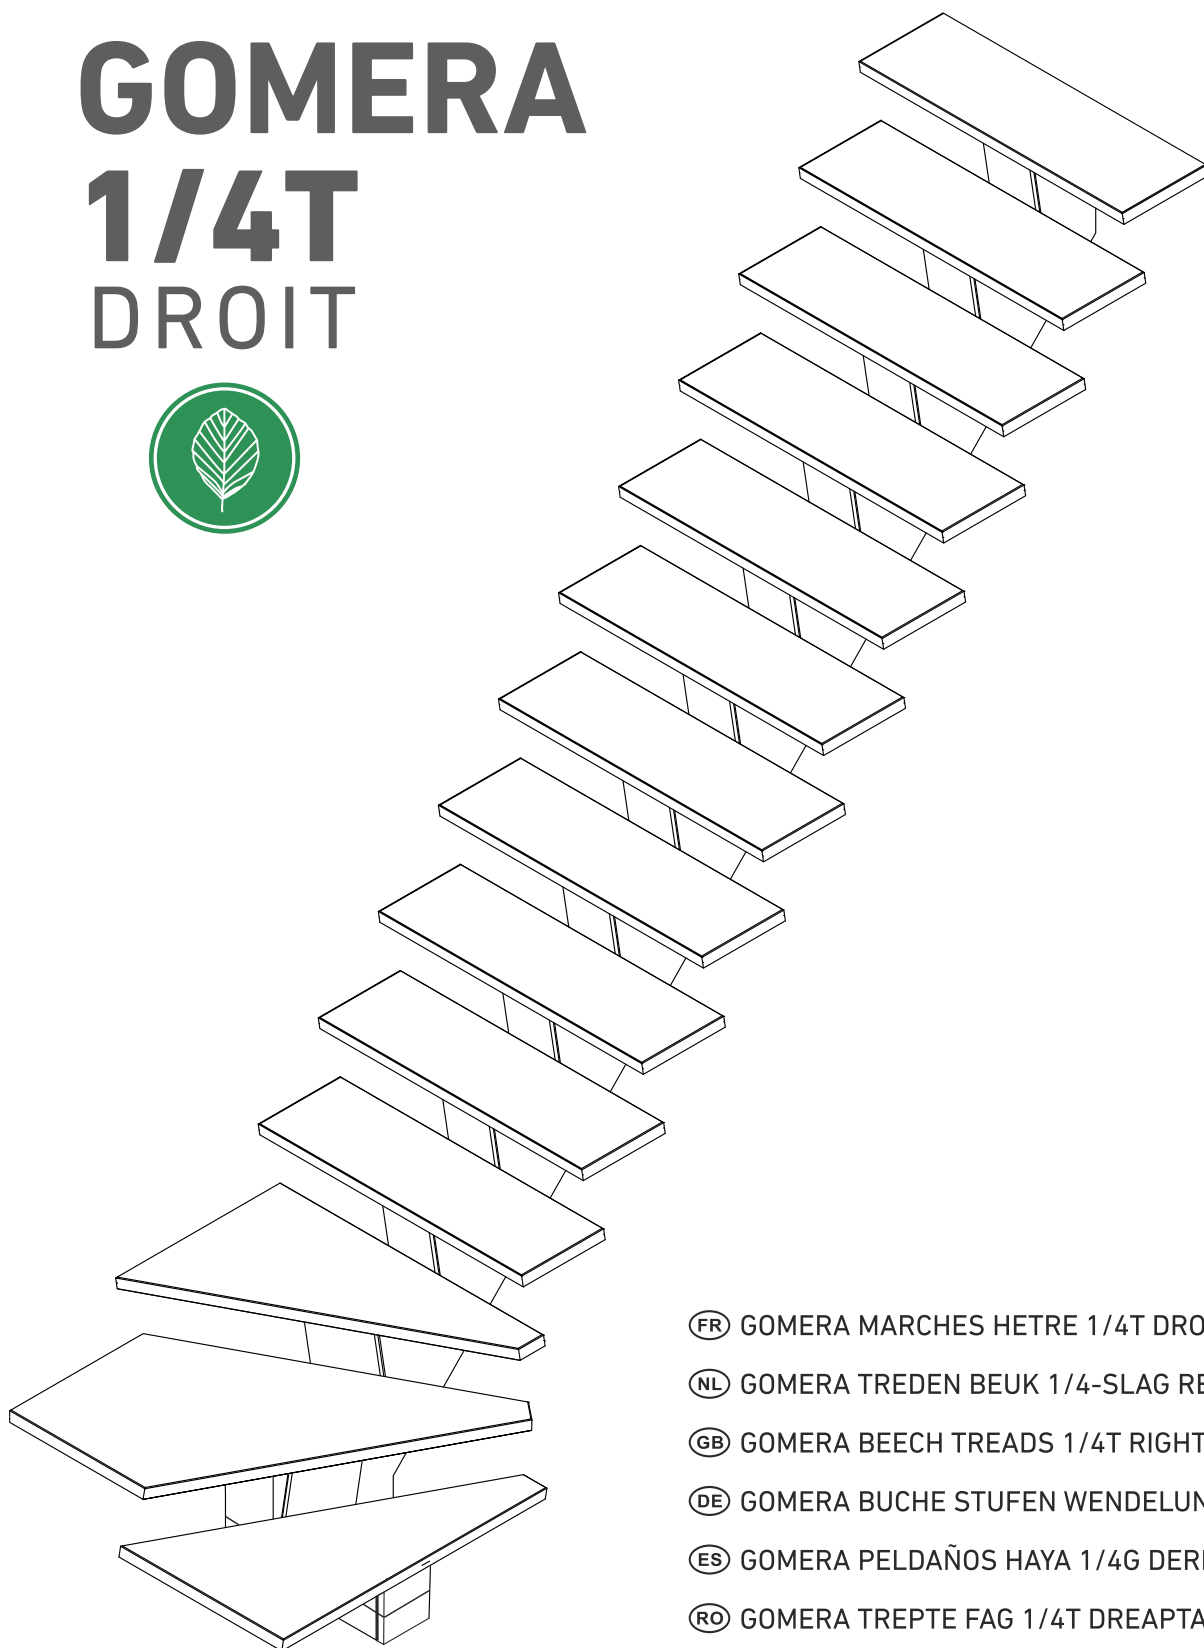


# GOMERA

## 1/4T

### DROIT














- (FR) GOMERA MARCHES HETRE 1/4T DROIT
- (NL) GOMERA TREDEN BEUK 1/4-SLAG RECHTS
- (GB) GOMERA BEECH TREADS 1/4T RIGHT
- (DE) GOMERA BUCHE STUFEN WENDELUNG RECHTS
- (ES) GOMERA PELDAÑOS HAYA 1/4G DERECHA
- (RO) GOMERA TREPTE FAG 1/4T DREAPTA


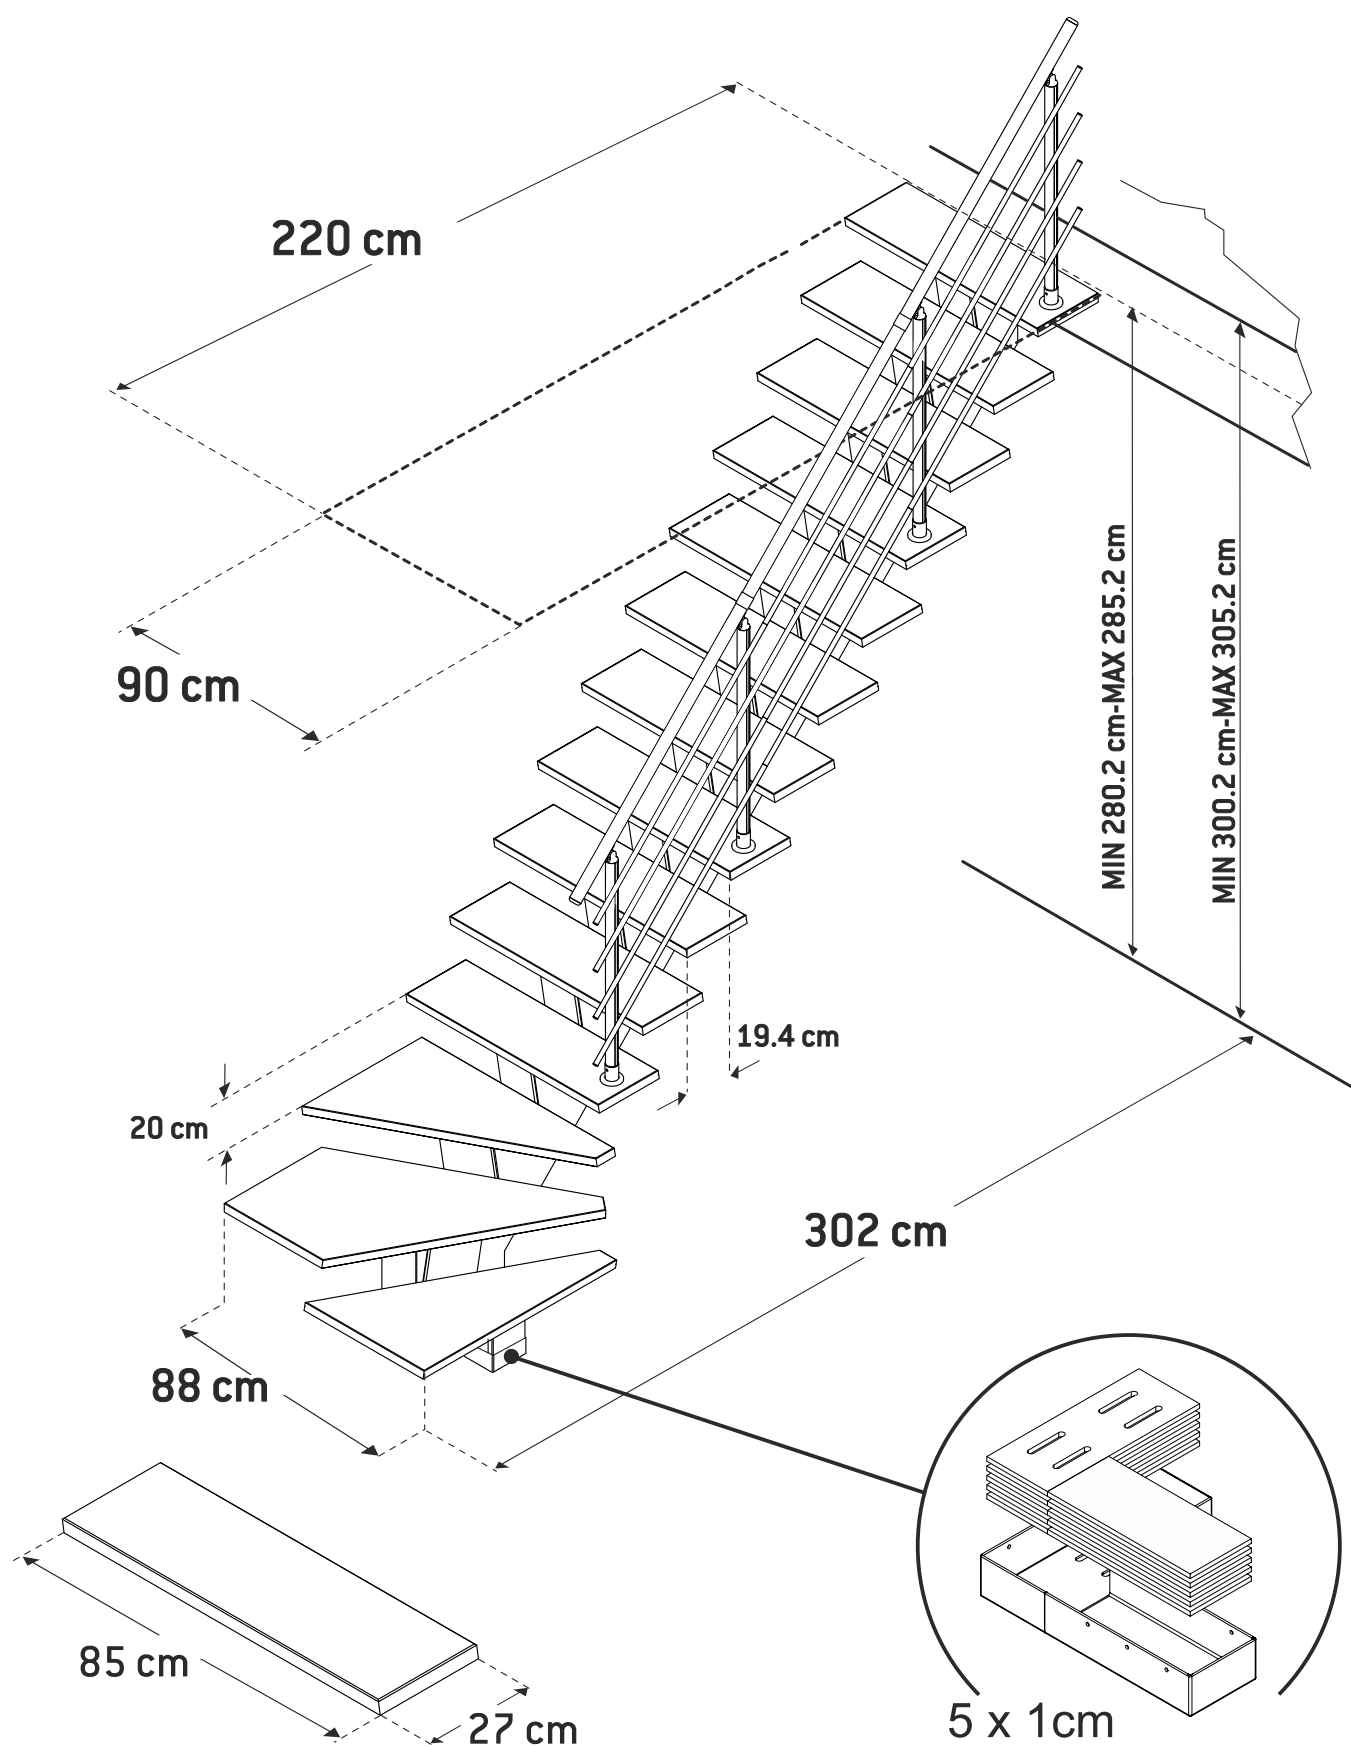




|                                                                  |                                                                |                                                               |                                                                                                        |
|------------------------------------------------------------------|----------------------------------------------------------------|---------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| <p>01<br/>x1</p> <p>150X390X1960</p> <p>70043030</p>             | <p>02<br/>x1</p> <p>150X390X1920</p> <p>D</p> <p>70043033D</p> | <p>03<br/>x1</p> <p>150X350X380</p> <p>D</p> <p>70043035D</p> | <p>04<br/>x10</p> <p>36,5X275X850</p> <p>81°<br/>99°</p> <p>D</p>                                      |
| <p>05<br/>x1</p> <p>36,5X275X850</p> <p>90°<br/>99°</p> <p>D</p> | <p>06<br/>x1</p> <p>36,5X538X855</p> <p>D</p>                  | <p>07<br/>x1</p> <p>36,5X624X1198</p> <p>D</p>                | <p>08<br/>x1</p> <p>36,5X425X850</p> <p>D</p>                                                          |
| <p>09<br/>x5</p> <p>10X150X450</p> <p>70041026</p>               | <p>10<br/>x5</p> <p>10X150X350</p> <p>70041025</p>             | <p>11<br/>x8+1</p> <p>Ø50X6</p> <p>70041032</p>               | <p>12</p> <p>A= Ø20X5<br/>B= Ø20X3</p> <p>A<br/>X56+2</p> <p>B<br/>X4</p> <p>70041031<br/>70041037</p> |
| <p>13<br/>x1</p> <p>90X164X456</p> <p>D</p> <p>70041036D</p>     | <p>14<br/>x1</p> <p>90X165X374</p> <p>70041039</p>             | <p>15<br/>x1</p> <p>50X162X315</p> <p>70041034</p>            | <p>16<br/>x1</p> <p>40X80X900</p> <p>D</p> <p>70042051D</p>                                            |

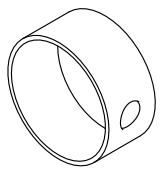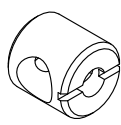





|                                                                                                                                        |                                                                                                                                          |                                                                                                                                           |                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>(17)<br/>x12</p> <p>40X80X700</p>  <p>70042044</p> | <p>(18)<br/>x1</p> <p>40X80X500</p>  <p>70042052</p>    | <p>(19)<br/>x82+2</p> <p>05X25</p>  <p>70041030</p>      | <p>(20)<br/>x32+2</p> <p>06,3X60 / 06,3X45</p>  <p>70041027</p> |
| <p>(21)<br/>x21+1</p> <p>07X40</p>  <p>70041007</p>  | <p>(22)<br/>x24+1</p> <p>M6X50</p>  <p>70041058</p>    | <p>(23)<br/>x4</p> <p>M8</p>  <p>70031037</p>          | <p>(24)<br/>x8</p> <p>M8</p>  <p>70031031</p>                  |
| <p>(25)<br/>x4</p> <p>M8X160</p>  <p>70031033</p>   | <p>(26)<br/>x8</p> <p>19X037X040</p>  <p>70031034</p> | <p>(27)<br/>x8</p> <p>11X18X35</p>  <p>70031030</p>   | <p>(28)<br/>x4</p> <p>020X20</p>  <p>70031036</p>             |
| <p>(29)<br/>x24</p> <p>15X016</p>  <p>70041059</p>  | <p>(30)<br/>x4</p> <p>M10X90</p>  <p>70031035</p>     | <p>(31)<br/>x8</p> <p>M12X016X80</p>  <p>70041006</p> | <p>(32)<br/>x1</p> <p>HEX 4</p>  <p>70041088</p>              |





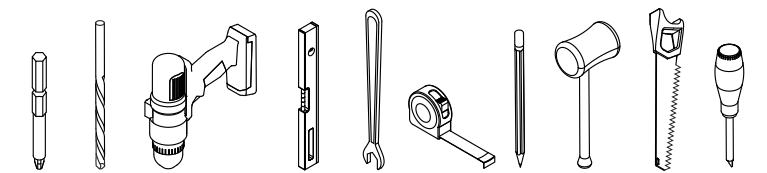
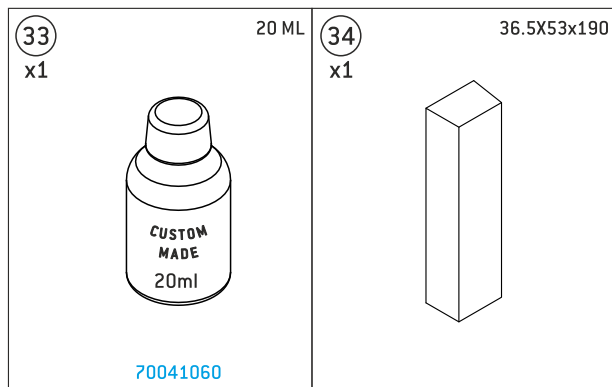


Ph2/3 016  
Pz2/3

10  
13  
17

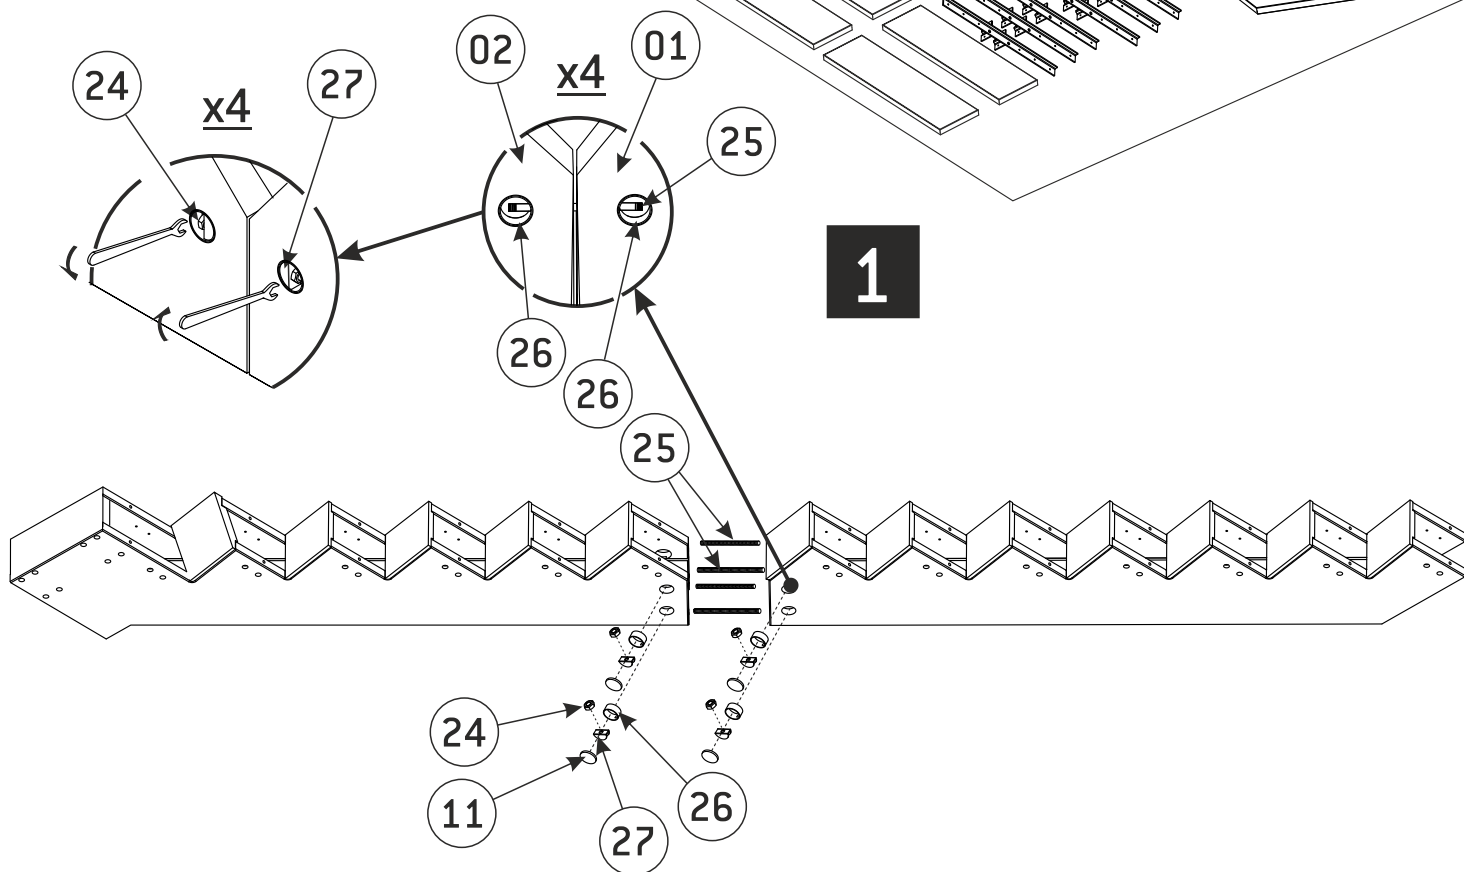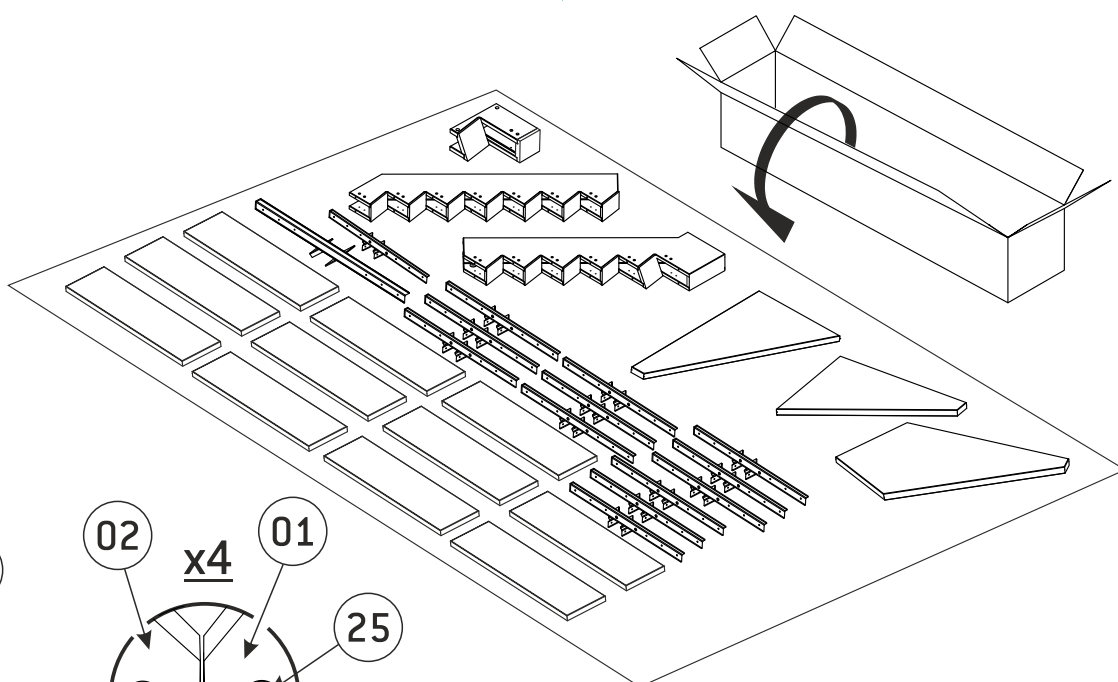

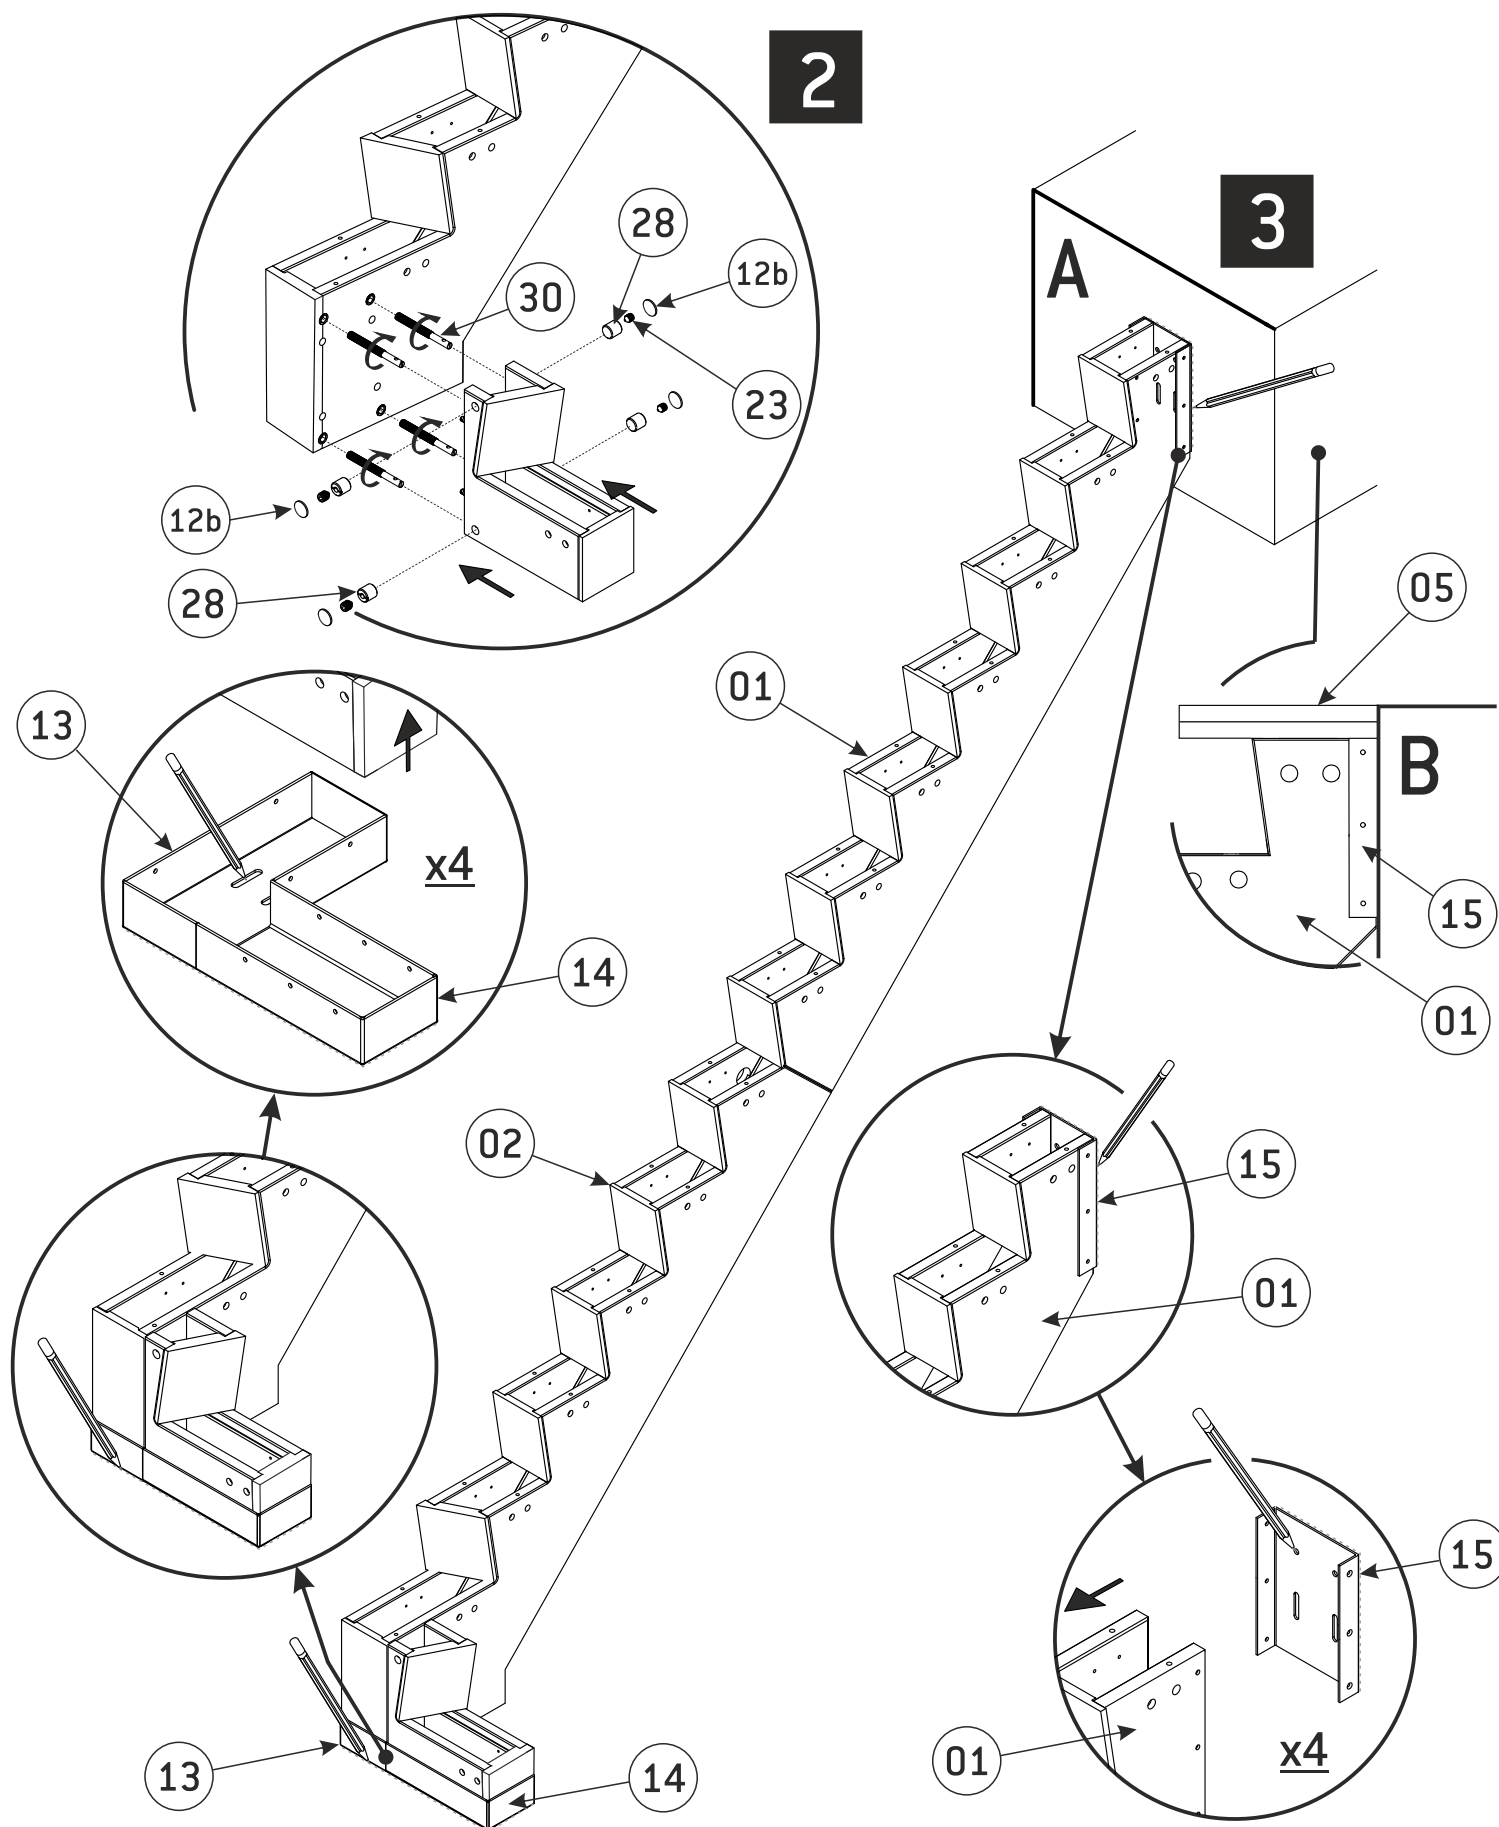


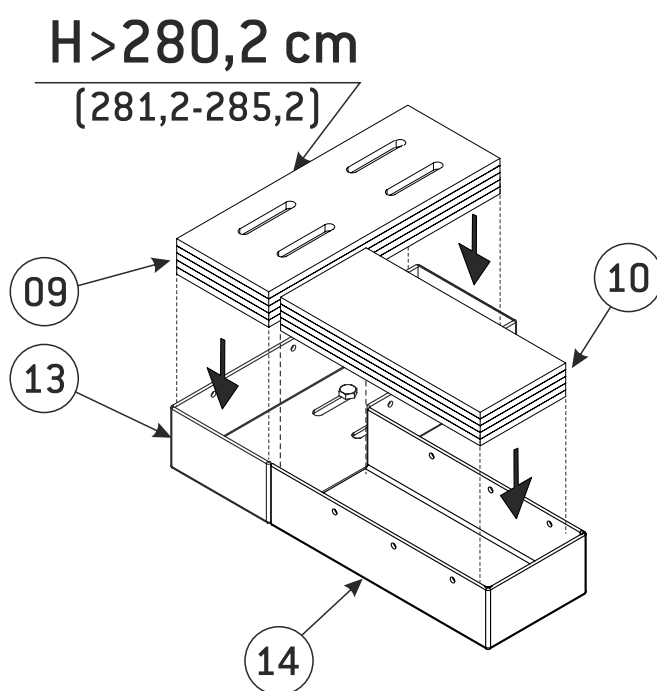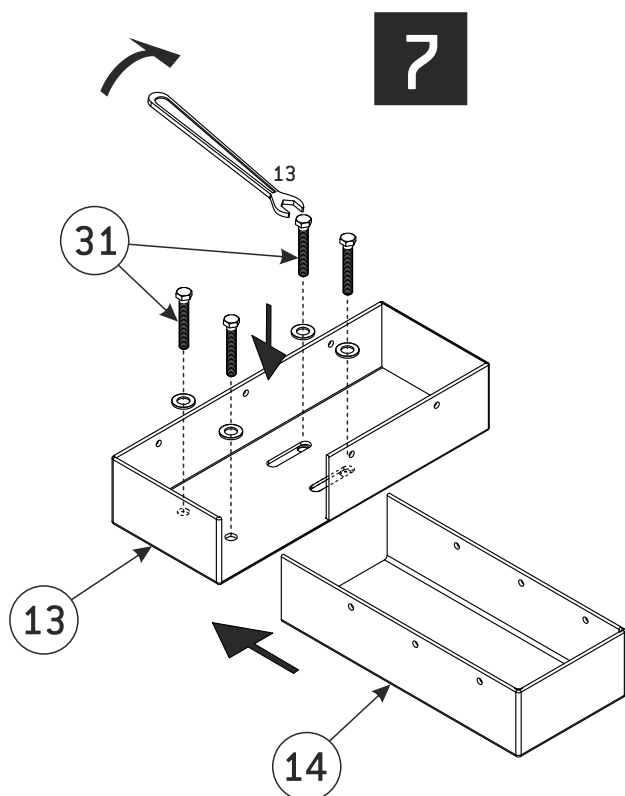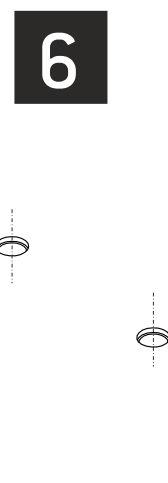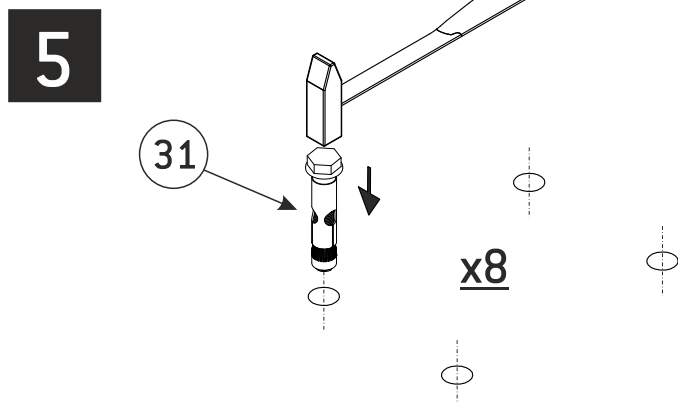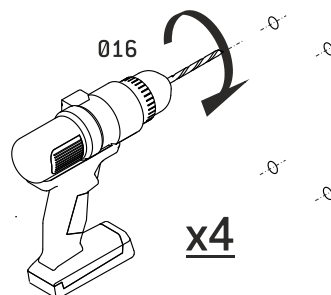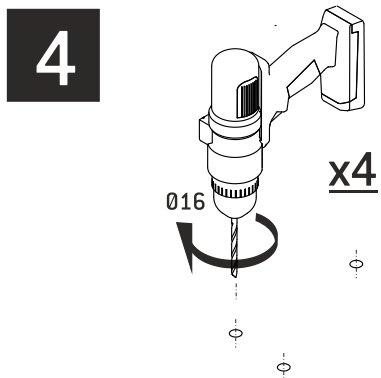



**I→II→III→IV**


Obligatoire!  
Compulsory!  
Verpflicht!  
Obligatorisch!  
Obligatorio!  
Obligatoriu!

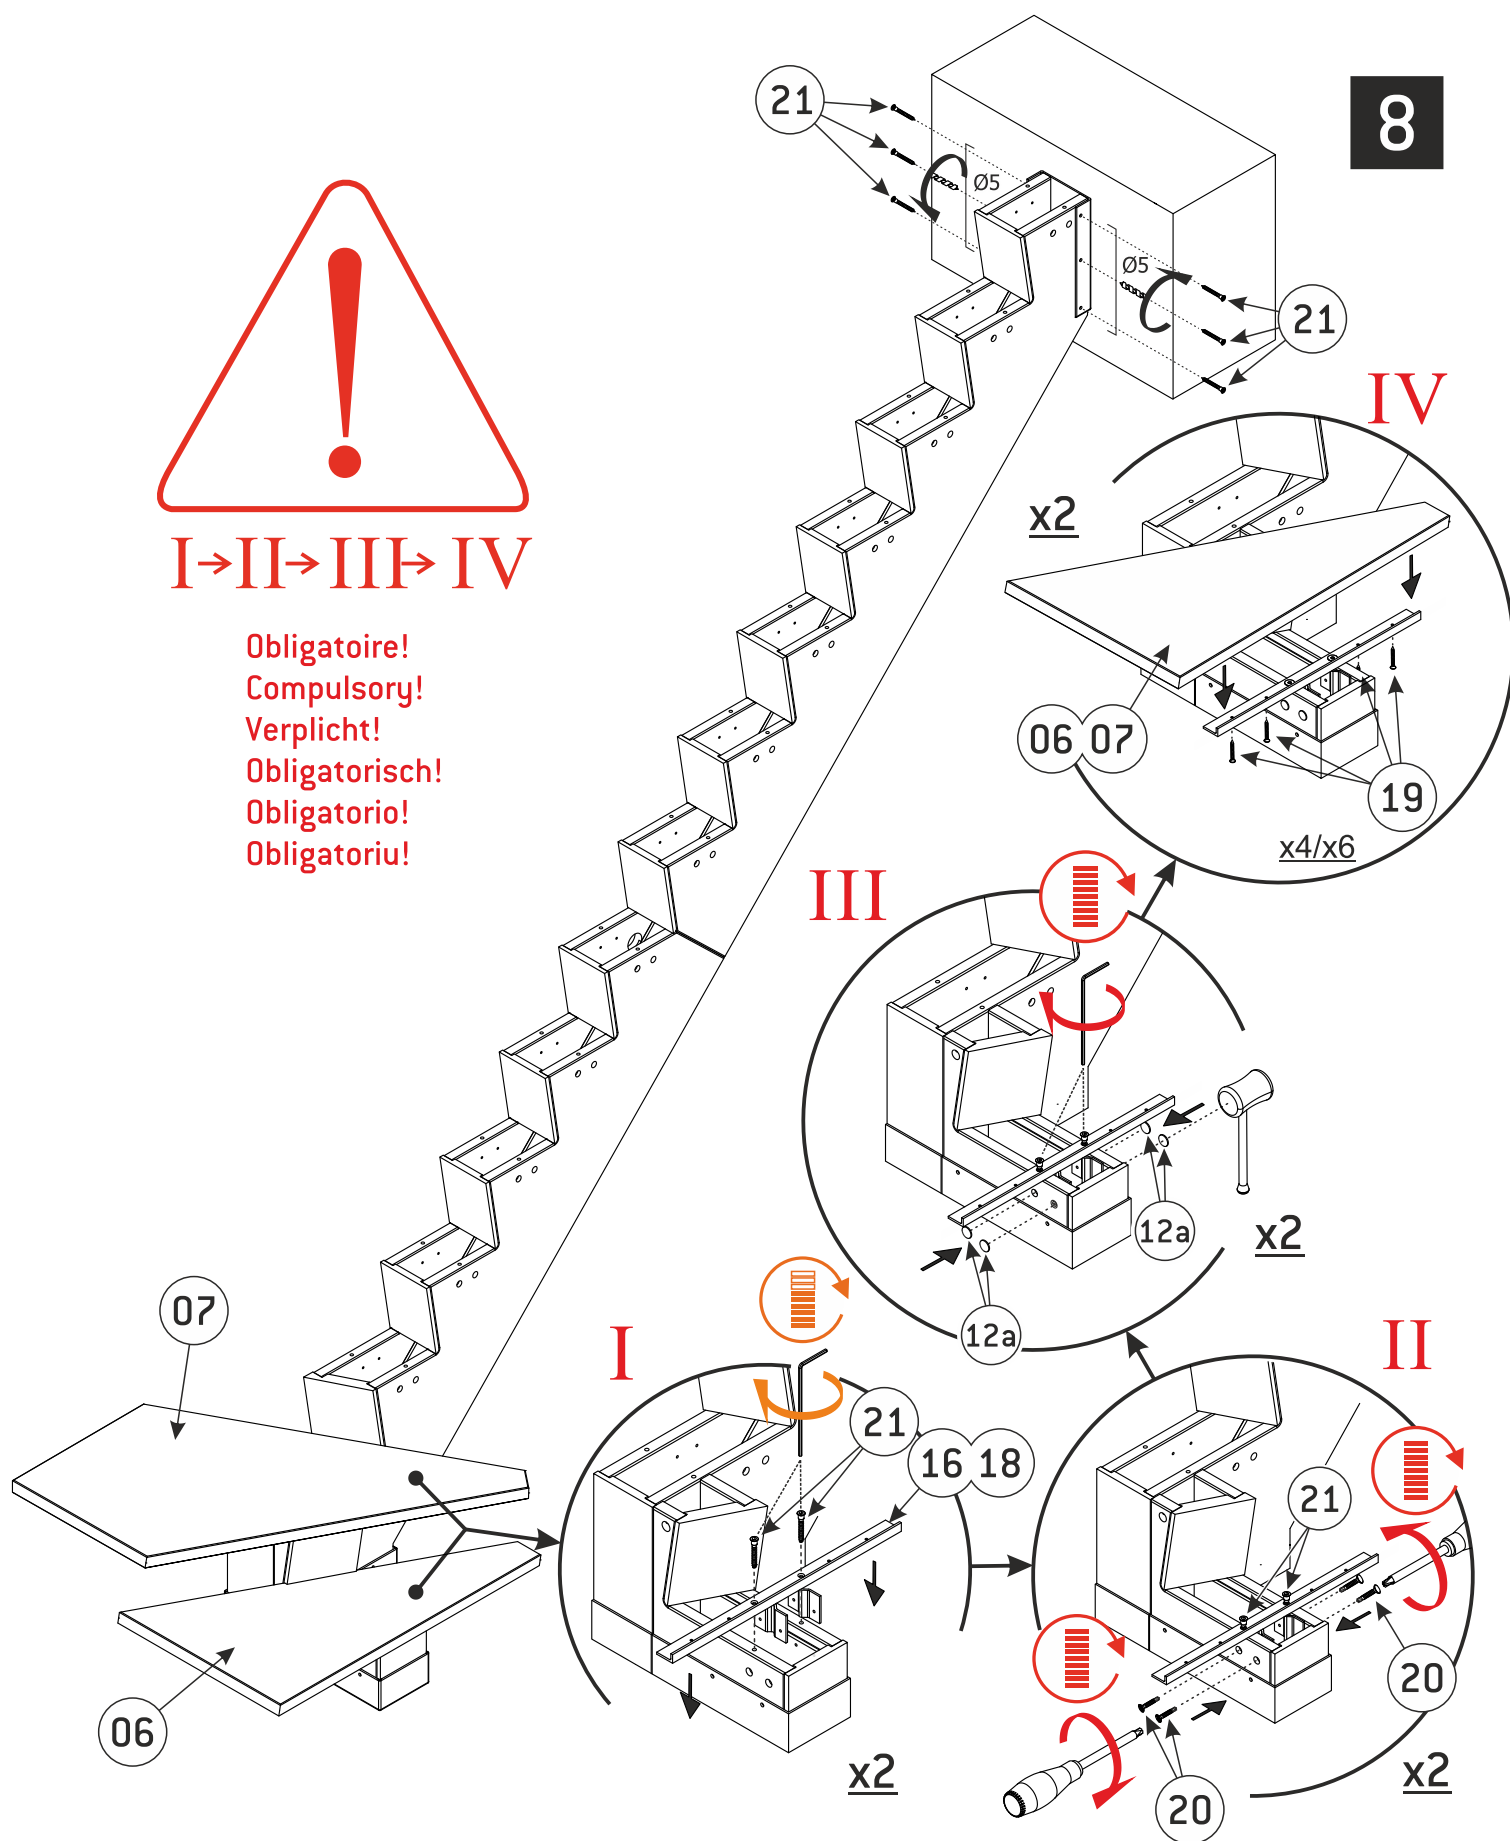




**I→II→III→IV**


Obligatoire!  
Compulsory!  
Verplicht!  
Obligatorisch!  
Obligatorio!  
Obligatoriu!

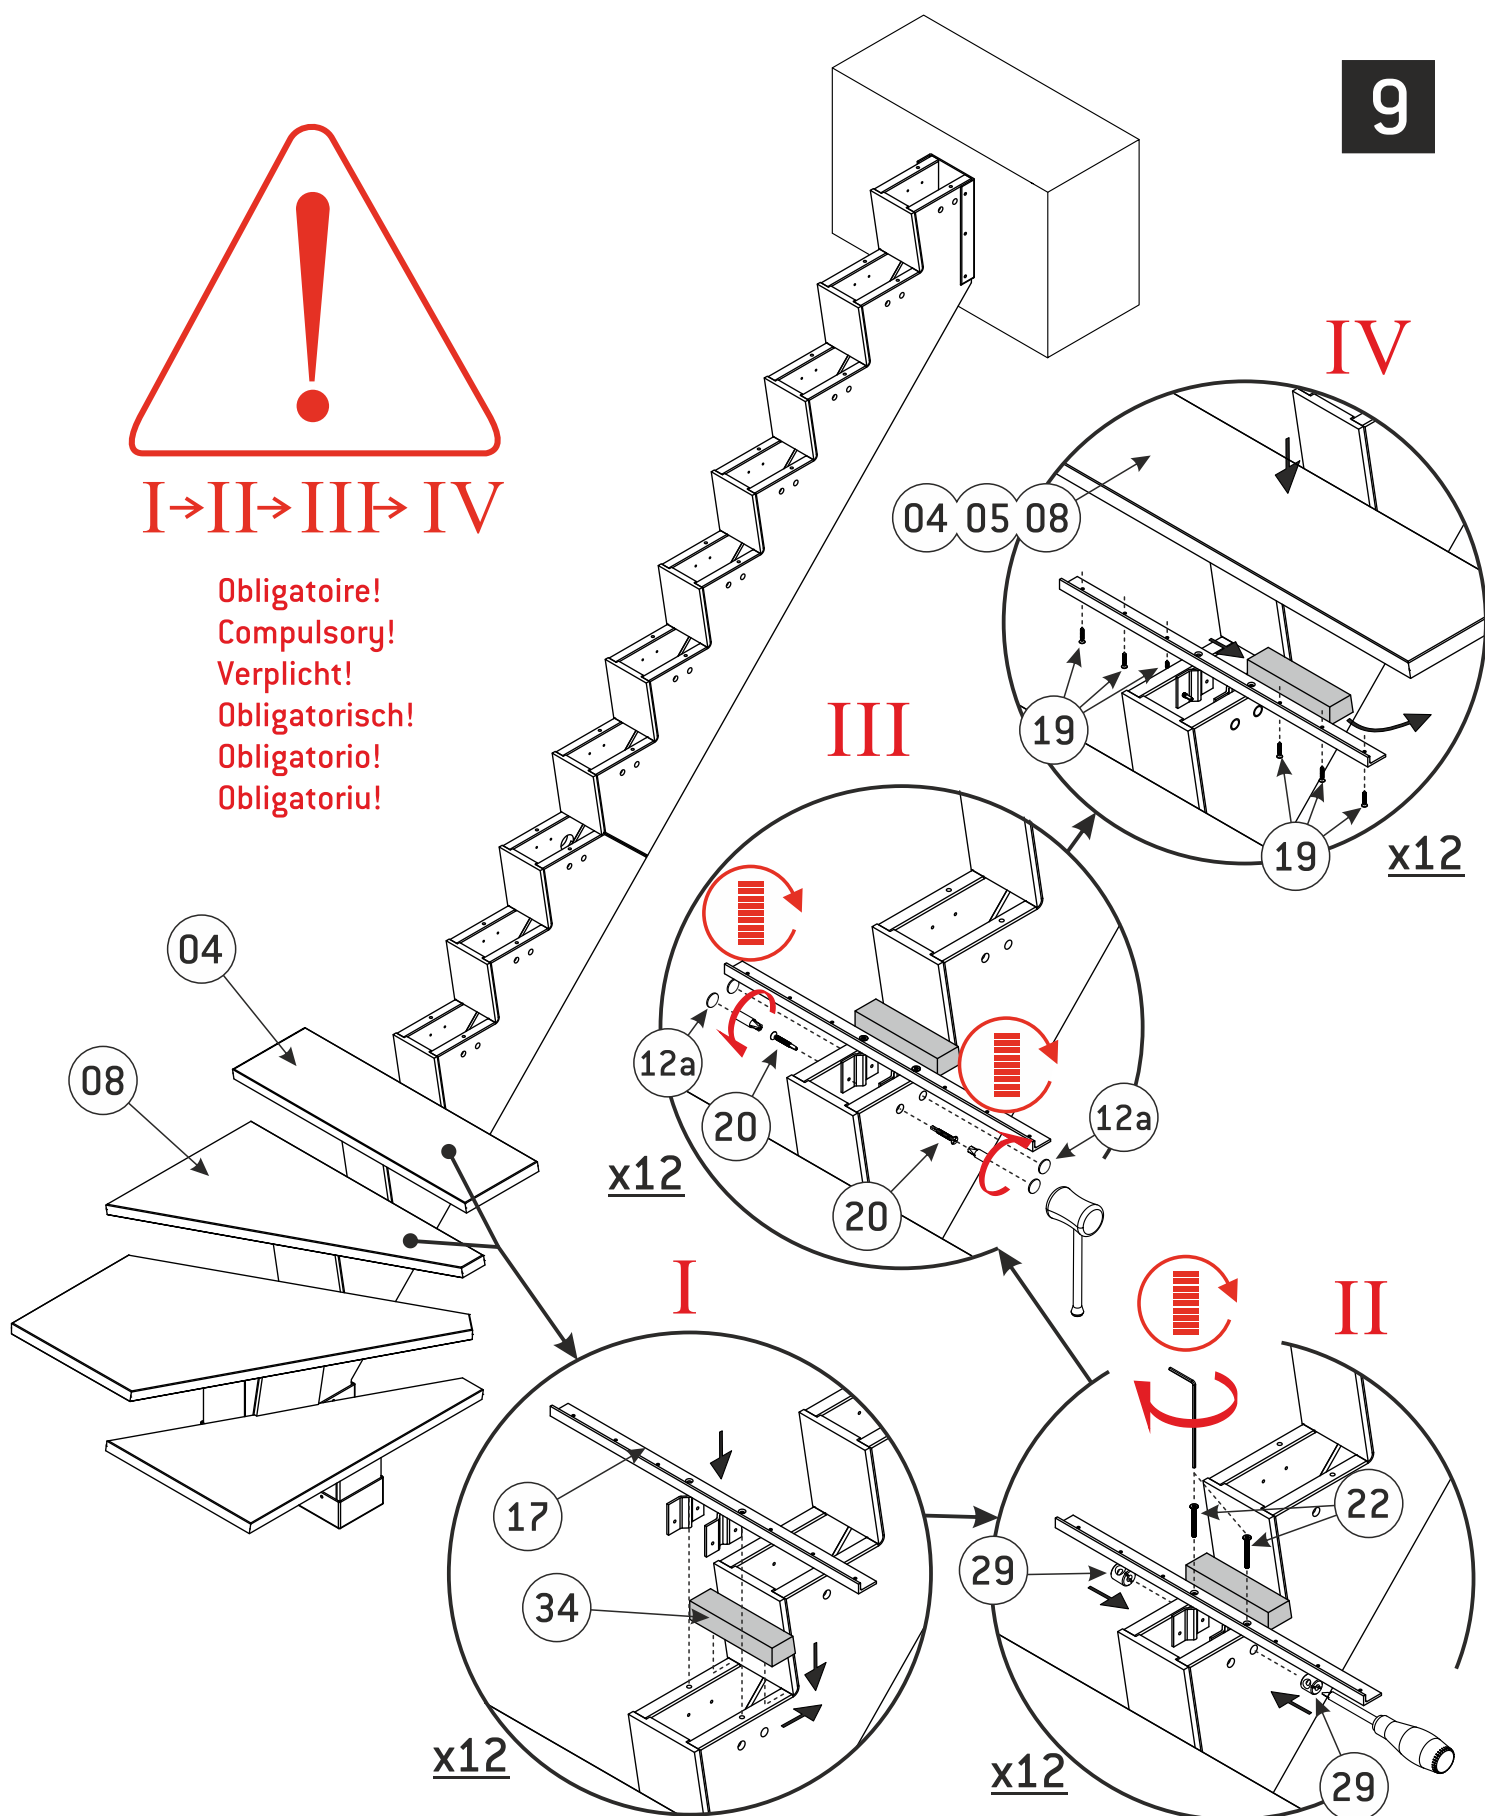



10

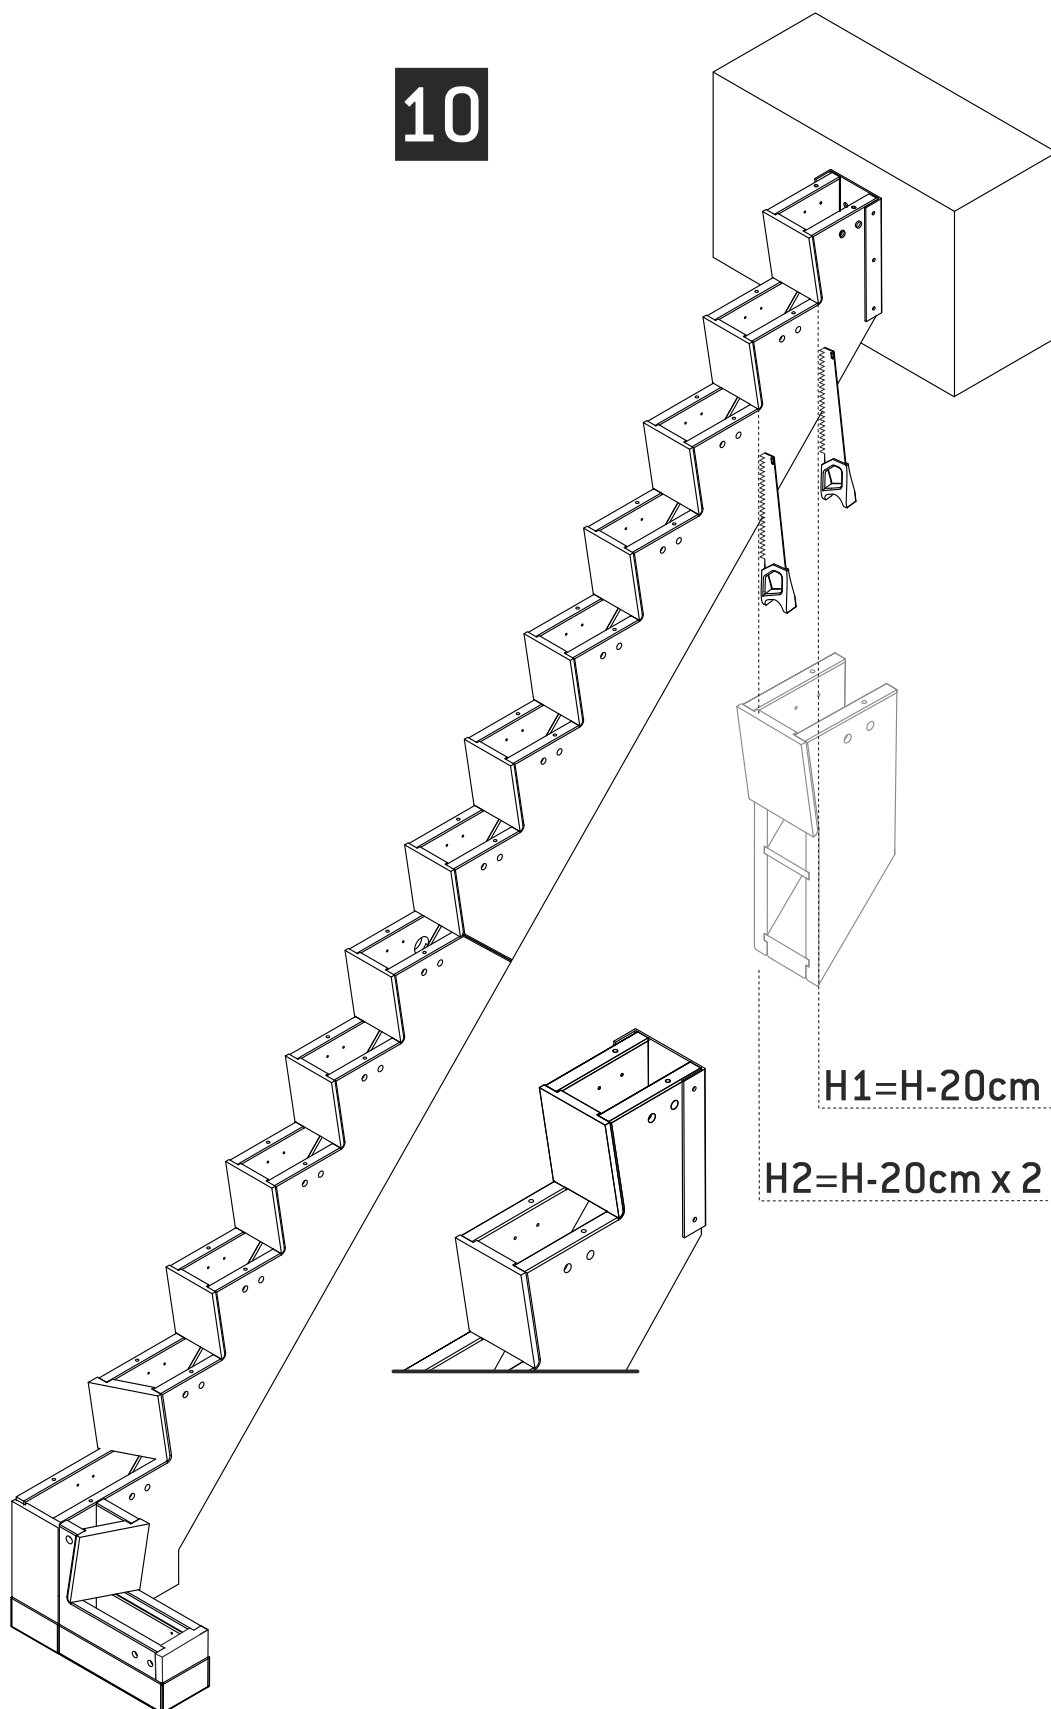

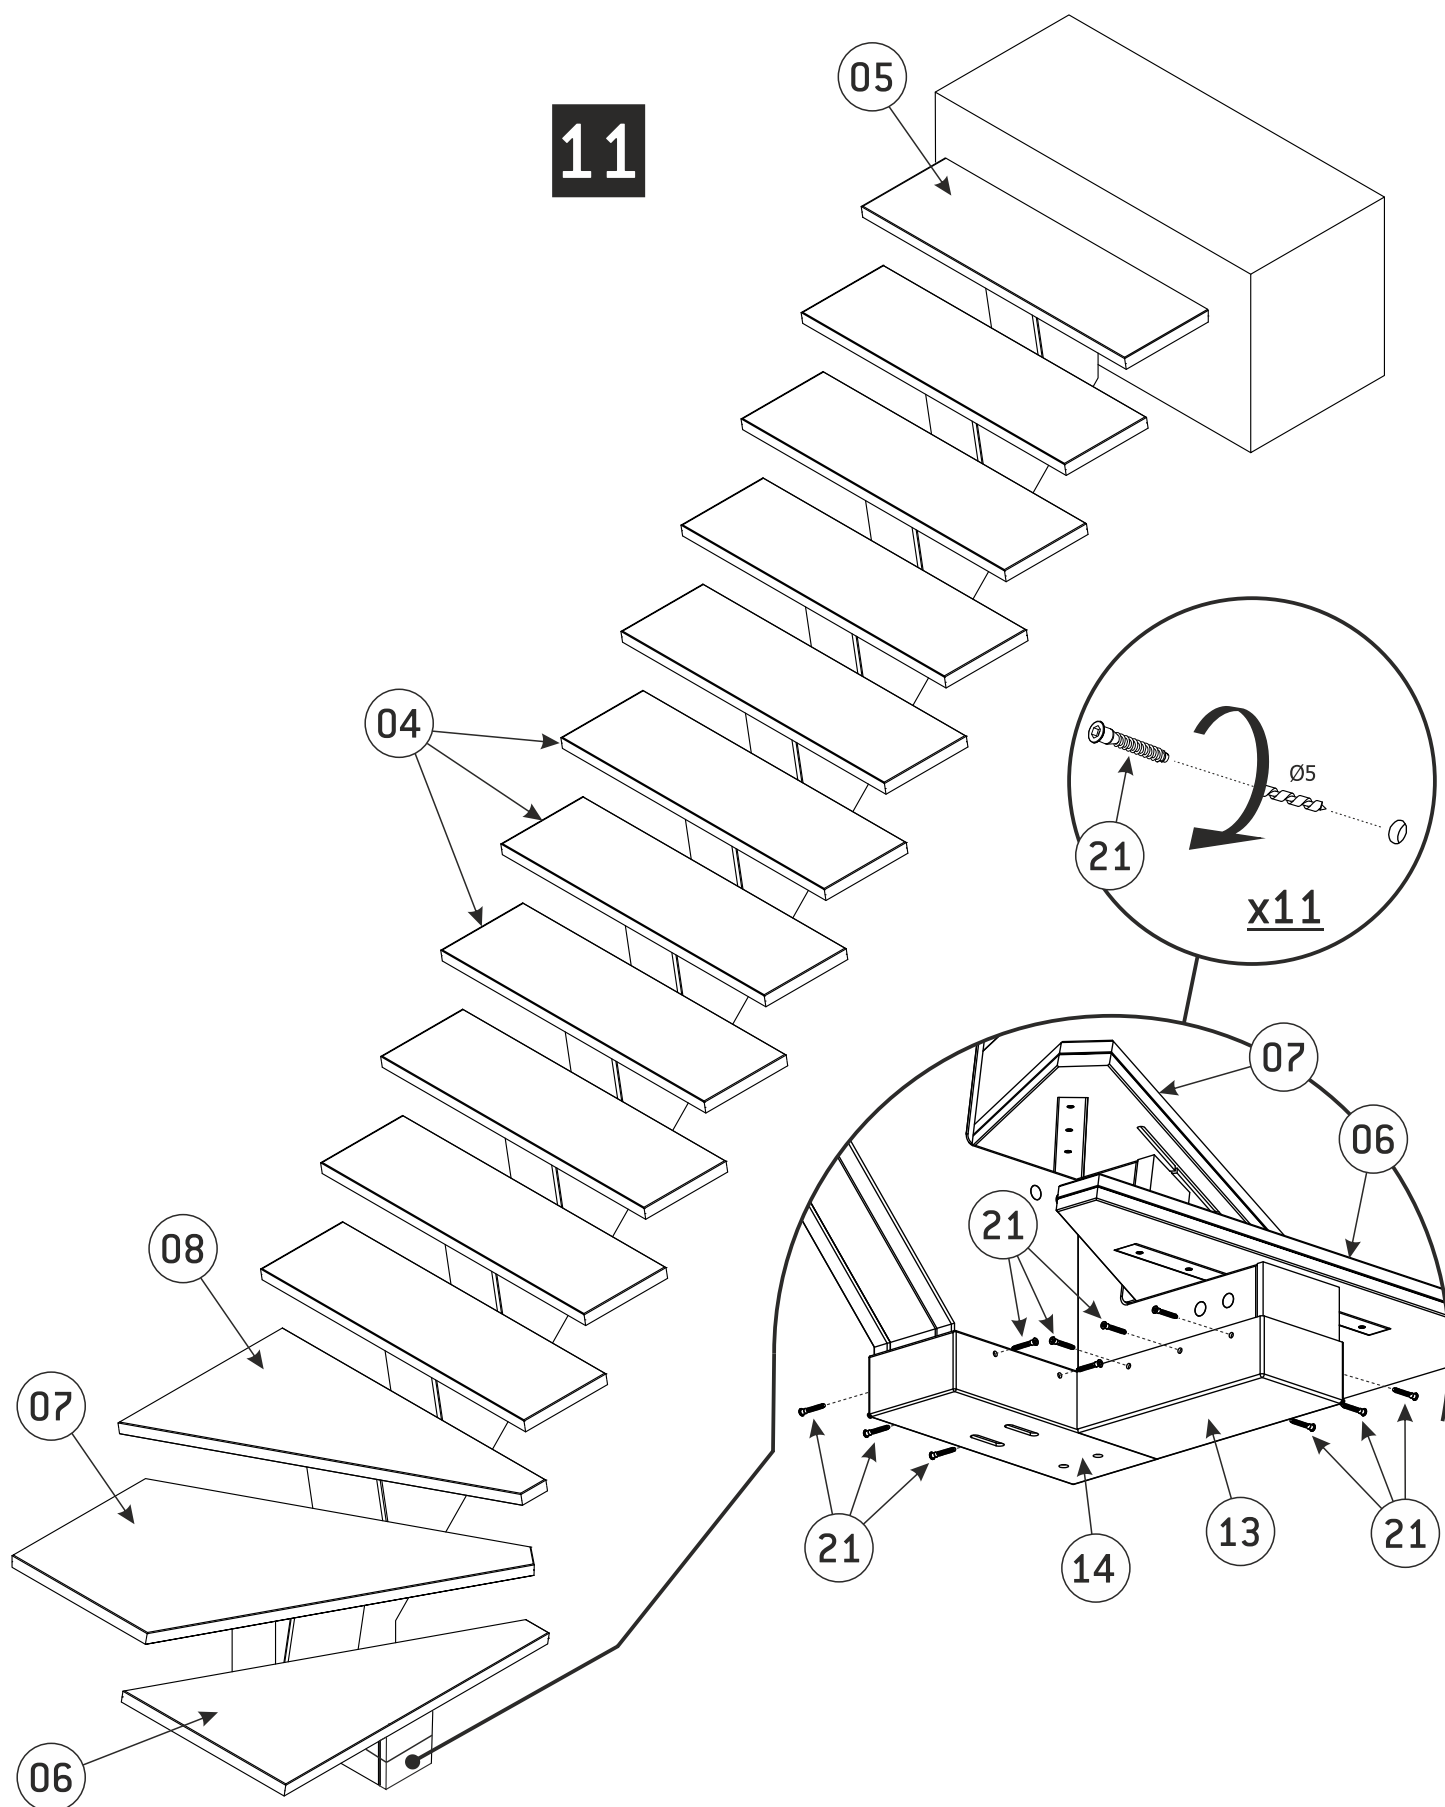**11**

40 AVENUE DE L'ESPÉRANCE - 6220 FLEURUS - BELGIUM  
TEL: +32/71/25.39.60, E-MAIL: info@sogem-sa.com